 
## Econoseal 10 nonstandard pinout (inpmux TEMPLATE)

Prefer the paper included with the device as reference. If lost, or not received, use 1k resistor to "gently" pull to GND or +5V, and see view gauges "analog inputs raw" in VT.

Backside of the female connector, or looking into the connector with male receptacles:



always verify GND pin continuity to EC36/pin26

EC10 pinout v3/14044 v3/14052

EC10/1 Ach0 (A=mch0) EC10/2 Ach1 EC10/3 Ach2 EC10/4 Ach3 EC10/5 Bch0 (B=mch1) EC10/6 Bch1 EC10/7 Bch2 EC10/8 Bch3 EC10/9 +5V EC10/10 GND