


0.04 trace =3A at 30C overtemp

Minimum trace separation at 500V is 1.8mm

But we have solder mask and professionally manufactured boards, we don't need 1.8mm

Investigate protective paint.

C7

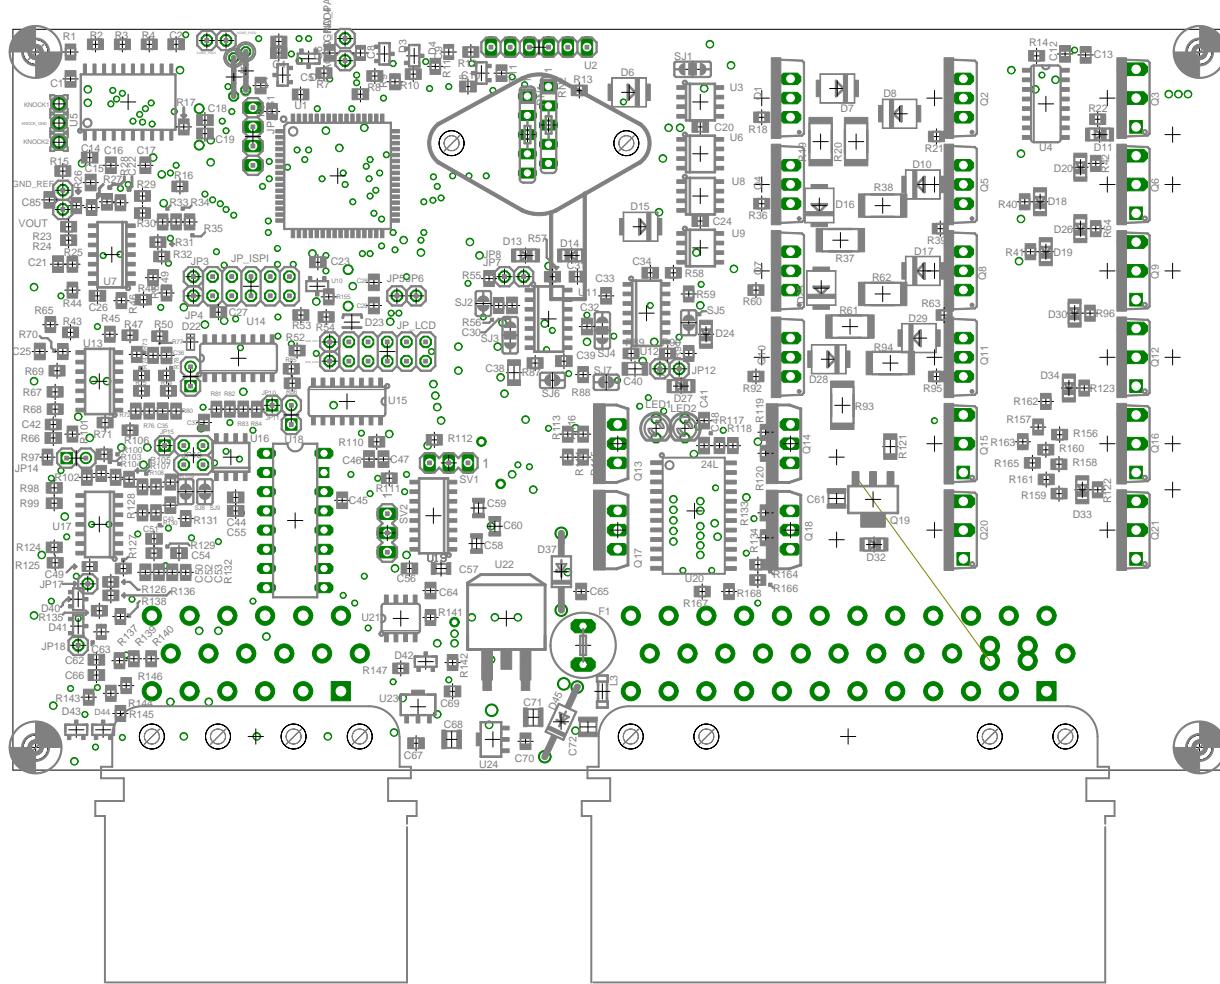

9/21/2004 12:24:10 /eagle/EFI/V3.0/megasquirtavr.brd